


ASSEMBLY INSTRUCTIONS

BERGERE BED BY AUTOBAN

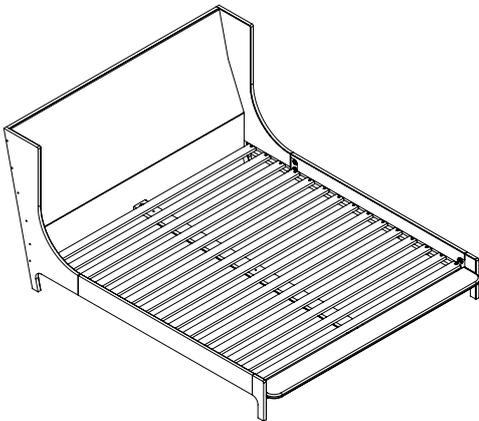

O
1
A
U
T
O
B
A
N

PARTS

- 1x headboard
- 1x footboard
- 2x sidebeams
- 1x central beam
- 15x timber slats (16 for California King size)

HARDWARE

Quantities vary per bed size. Smaller quantity for Queen, larger quantity for King.

- (7x) Universal connector with metal dowel
- (2x) M8x25 countersunk screws



- (30-32x) M5x50 bolts
- (30-32x) Washers



YOU WILL NEED

- 8mm socket/ratchet key/set OR cordless drill with the appropriate attachment
- Phillips head screwdriver
- 6mm Allen Key and the help of a partner

NOTES

NOTE 1: Be certain that all assembly is carried out on a flat and stable surface. This will ensure a good final result. Reverse the steps to disassemble the piece.

NOTE 2: Your furniture arrives packed in numerous layers that protect it during transport. It is important that you remove the packaging carefully to avoid damaging your furniture. Refer to our information sheet "Unpacking Your Furniture" for further details.

NOTE 3: Great care is required when assembling our products. Use blankets to soften the assembly surface - hard surfaces such as wood or stone flooring may damage the furniture if in direct contact.

NOTE 4: We advise that assembly and disassembly of De La Espada furniture is undertaken by a minimum of 2 people.

ASSEMBLY INSTRUCTIONS CONTINUED

BERGERE BED

NOTE 5: When screwing in bolts, tighten well, but be sure NOT TO OVERTIGHTEN. This can cause the thread to strip thus resulting in A poor connection.

NOTE 6: All mating parts are numbered so they correspond to the appropriate part around the frame of the bed. you will ensure the best possible fit if all parts are mated with the corresponding numbered parts. While you work, be sure all connections are flush with no gaps.

1. IDENTIFY THE COMPONENTS OF THE MAIN FRAME


a) The sidebeams and the central beam have a wooden dowel protruding from either end. Identify correct orientation by matching up the numbers: 1 connects to 1, 2 connects to 2, and so forth.

2. ATTACH THE CENTRAL BEAM TO THE FOOTBOARD

a) Place the footboard upside down on the floor.

b) Place the central beam onto the underside of the footboard, aligning the pre-drilled holes, and inserting the wooden dowel on the central beam into the corresponding hole on the footboard.

c) Connect the two components with 2x M8x25 countersunk screws, tightened with a Philips head screwdriver.

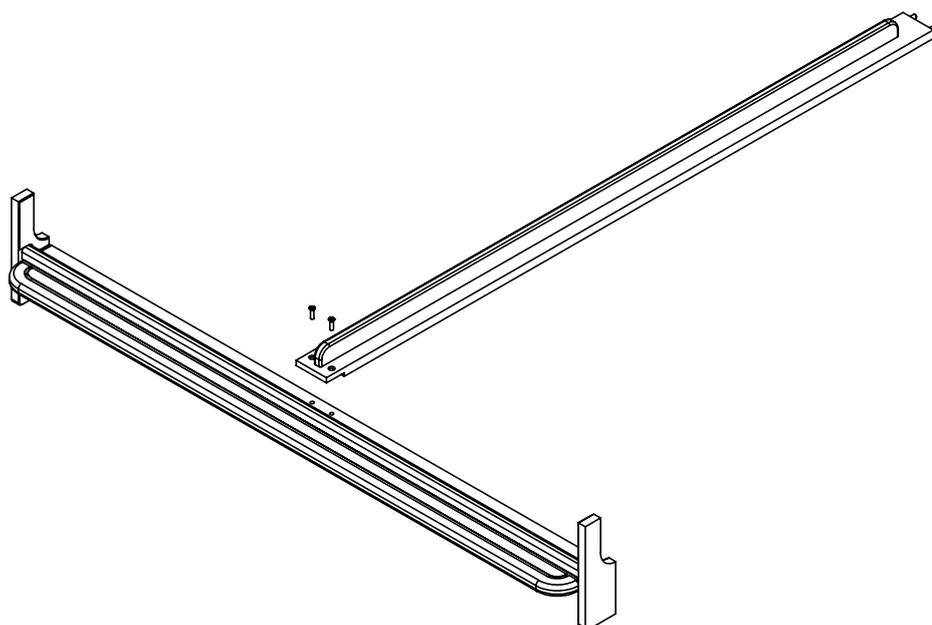


0
2
A
U
T
O
B
A
N

ASSEMBLY INSTRUCTIONS CONTINUED


BERGERE BED

3. ATTACH THE SIDEBEAMS TO THE FOOTBOARD

- a) Flip the footboard so it is in its natural upright position.
- b) Insert a Universal Connector (large round metal hardware) into the pre-drilled hole in each sidebeam and insert a metal dowel into the corresponding hole in each end of the footboard.

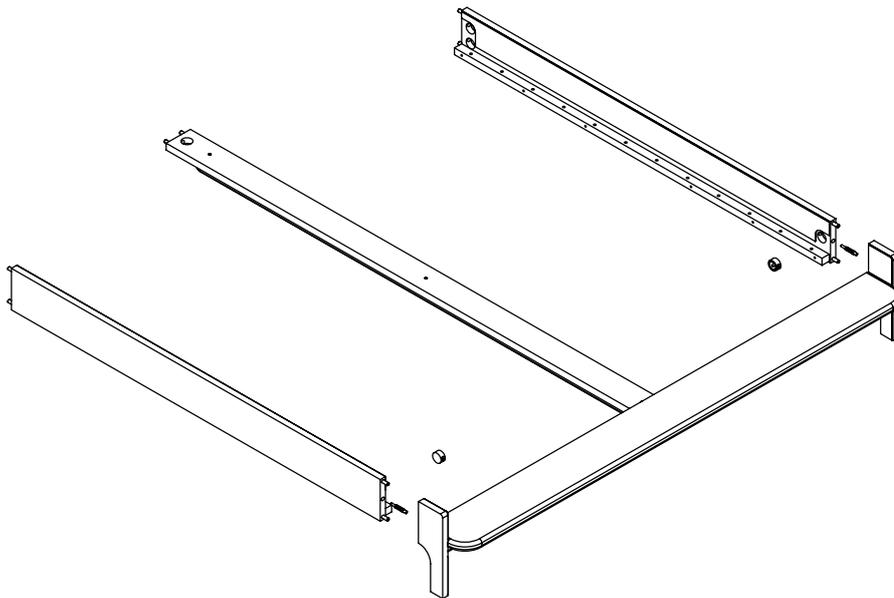

- c) Connect the parts by guiding the metal dowels into the Universal Connectors and the wooden dowels into the corresponding holes. Insert an Allen Key into the centre of each Universal Connector and tighten loosely.

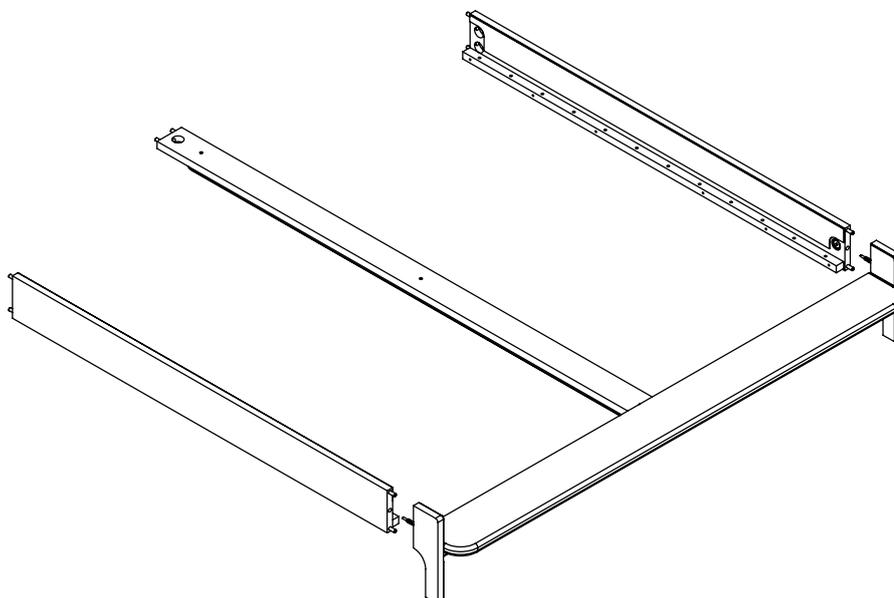


0
3
A
U
T
O
B
A
N

ASSEMBLY INSTRUCTIONS CONTINUED

BERGERE BED

4. ATTACH THE SIDEBEAMS AND CENTRAL BEAM TO THE HEADBOARD


a) Insert two Universal Connectors (large round metal hardware) into the pre-drilled holes in each sidebeam, and one into the pre-drilled hole in the top of the central beam. Insert metal dowels into the corresponding holes in the headboard.

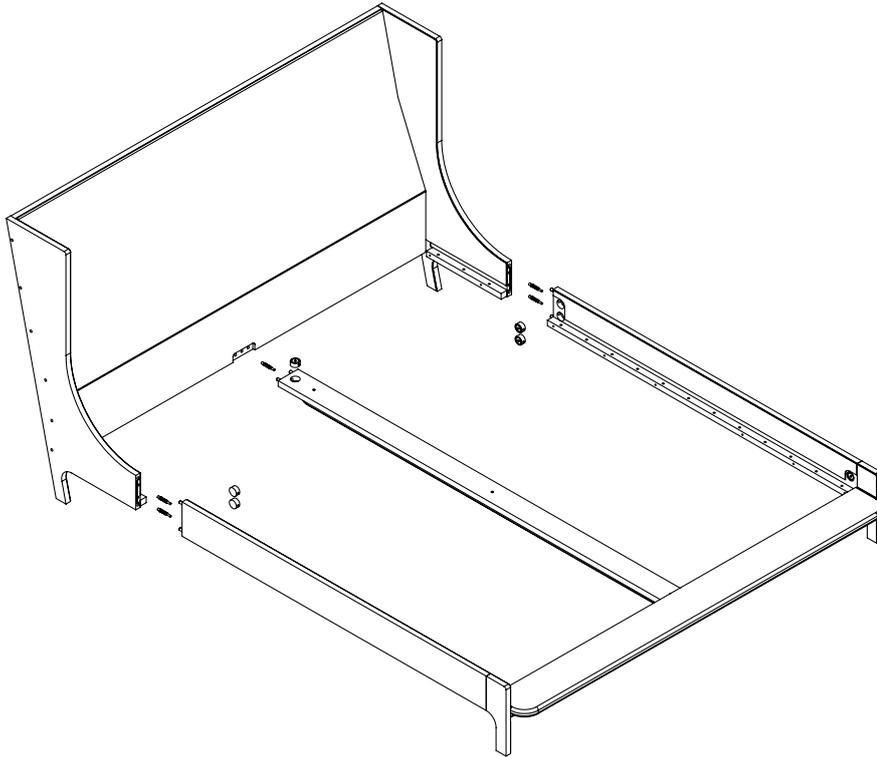


0
 4
 A
 U
 T
 O
 B
 A
 N

ASSEMBLY INSTRUCTIONS CONTINUED
BERGERE BED

b) Push the components together, guiding the metal dowels into the Universal Connectors, and the wooden dowels into the corresponding holes. Tighten loosely with an Allen Key.

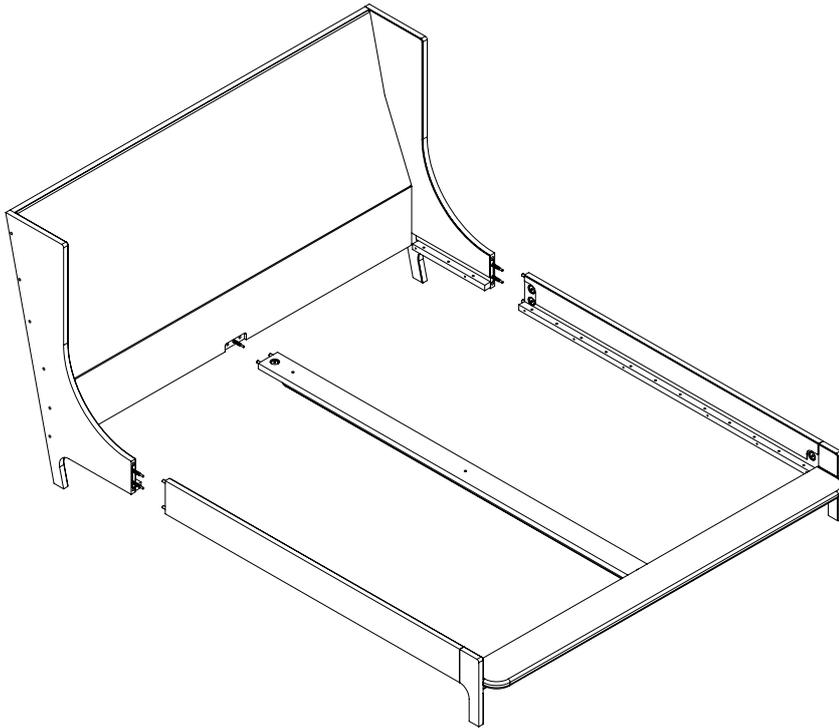

c) Check alignment of all components- headboard, footboard, sidebeams and central beam, make adjustments where necessary, then tighten all connections firmly.

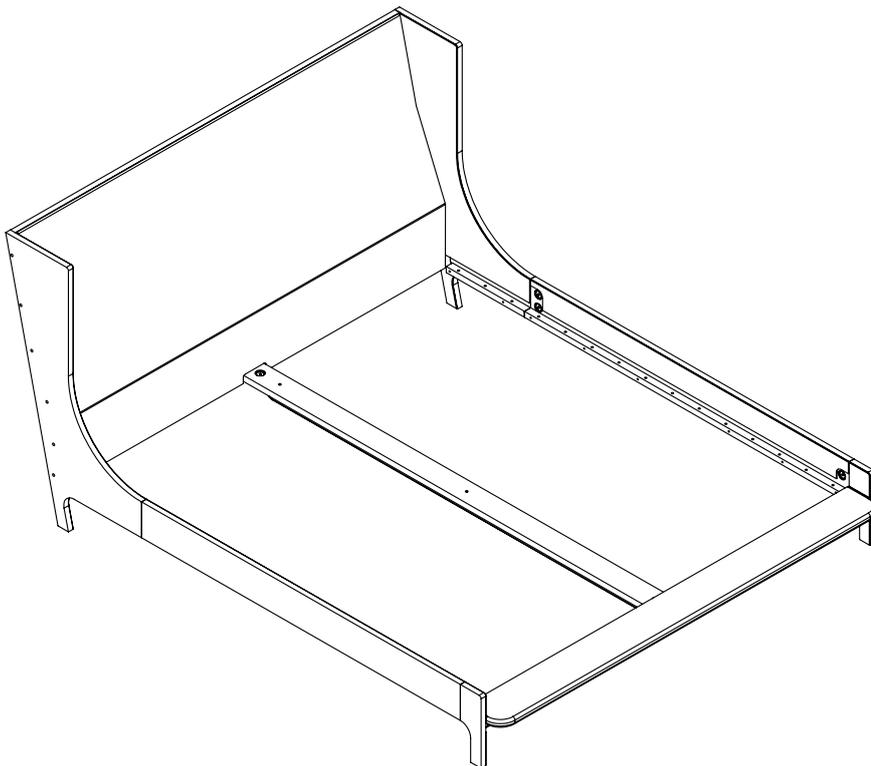

0
5
A
U
T
O
B
A
N


ASSEMBLY INSTRUCTIONS CONTINUED

BERGERE BED

5. ATTACH THE TIMBER SLATS TO THE PLATFORM BASE

a) Space out the bed slats so they are aligned with the corresponding holes on the timber lip on the inner face of the side beams. The underside of the each slat has a threaded sleeve fixed inside. If the sleeve drops out, there are spares you can use. The top of each slat has a recess for the washer.

b) Place a washer in the recess of each slat and insert a silver bolt through the slat and into the sidebeam. Using a cordless drill or socket set, tighten the bolts. Tighten the slats well, so they are not wobbly, but be very careful not to overtighten.

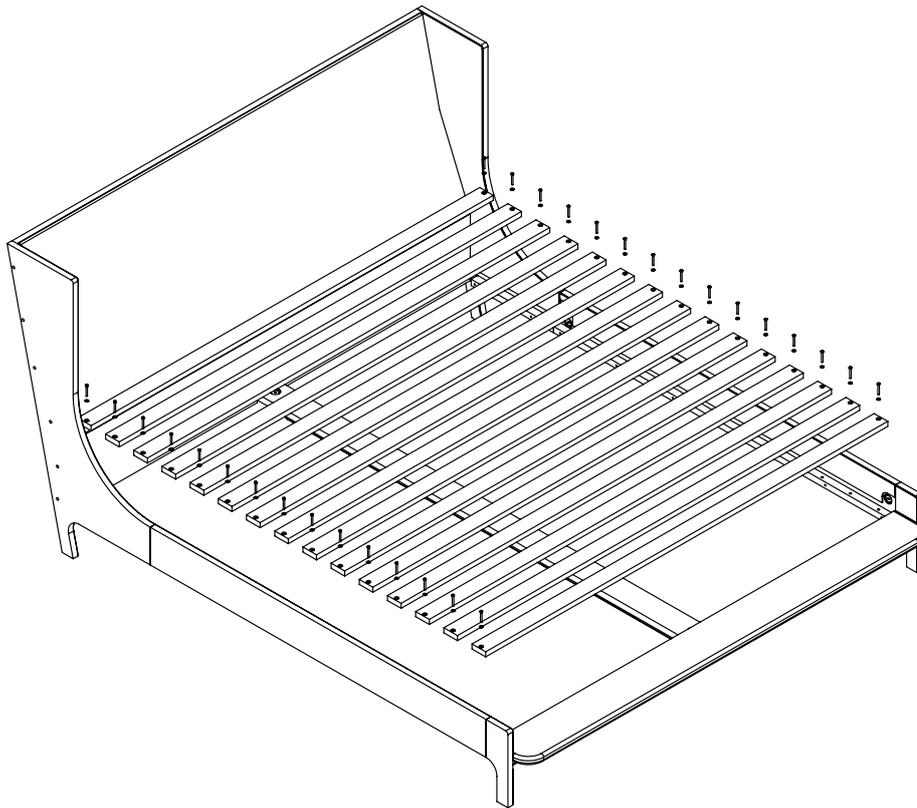


0
6
A
U
T
O
B
A
N

ASSEMBLY INSTRUCTIONS CONTINUED

BERGERE BED

c) Assembly is now complete, and the bed is ready to receive a mattress.

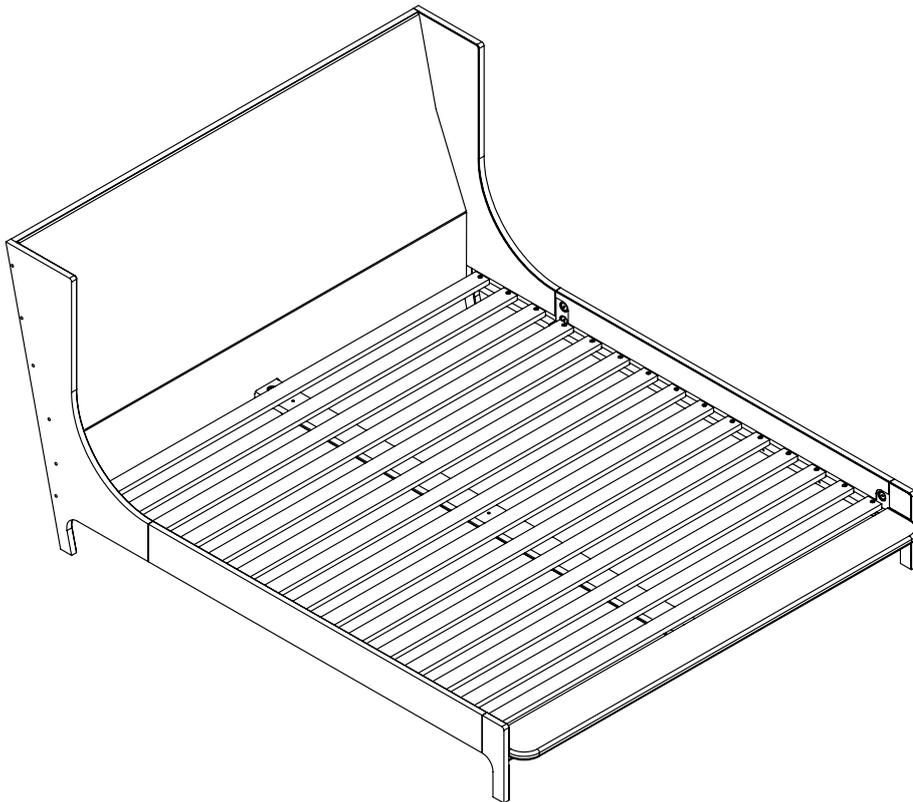

0
7
A
U
T
O
B
A
N