


ASSEMBLY INSTRUCTIONS

BRETTON BED BY MATTHEW HILTON

PARTS

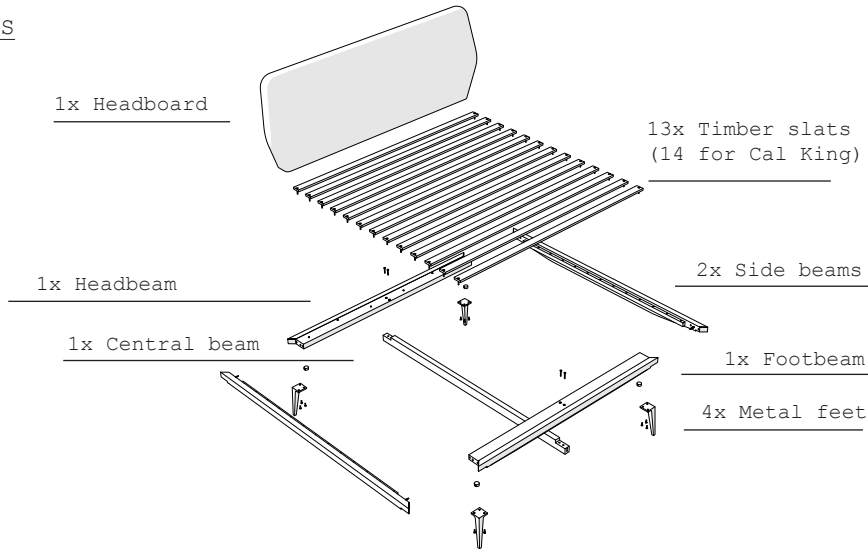

HARDWARE

(4x) Universal connector




(4x) M8x40 Metal dowel



(12x) M6x20 bolts



(10x) M6x45 bolts



(26x) M5 bolts



(26x) M5 washers



YOU WILL NEED

- 8mm socket/ratchet set OR cordless drill with the appropriate attachment
- Phillips head screwdriver
- 6mm and 5mm Allen Key
- The help of a friend

NOTES

NOTE 1: Be certain that all assembly is carried out on a flat and stable surface. This will ensure a good final result. Reverse the steps to disassemble the piece.

NOTE 2: Your furniture arrives packed in numerous layers that protect it during transport. It is important that you remove the packaging carefully to avoid damaging your furniture. Refer to our information sheet "Unpacking Your Furniture" for further details.

NOTE 3: Great care is required when assembling our products . Use blankets to soften the assembly surface - hard surfaces such as wood or stone flooring may damage the furniture if in direct contact.

NOTE 4: We advise that assembly and disassembly of De La Espada furniture is undertaken by a minimum of 2 people.

O
1
M
A
T
T
H
E
W
W
H
I
L
T
O
N

ASSEMBLY INSTRUCTIONS CONTINUED

BRETTON BED

NOTE 5: When screwing in bolts, tighten well, but be sure NOT TO OVERTIGHTEN. This can cause the thread to strip thus resulting in a poor connection.


NOTE 6: All mating parts are numbered so they correspond to the appropriate part around the frame of the bed. you will ensure the best possible fit if all parts are mated with the corresponding numbered parts. While you work, be sure all connections are flush with no gaps.

INSTRUCTIONS


1. ATTACH CENTRAL BEAM TO HEADBEAM AND FOOTBEAM

a) Unpack components and lay them face down on the floor, so they are in the correct orientation. Check for number markings.

b) Place cutout of central beam onto the cutout on the head-beam, by slotting the wooden dowels into the corresponding holes.

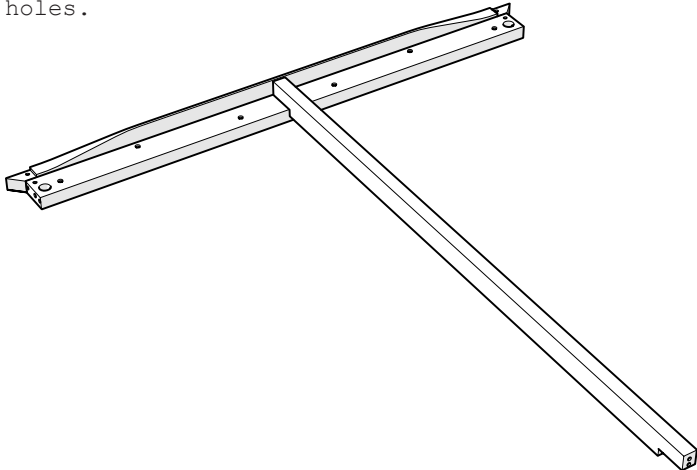

c) Place cutout of central beam onto the cutout on the foot-beam, by slotting the wooden dowels into the corresponding holes.

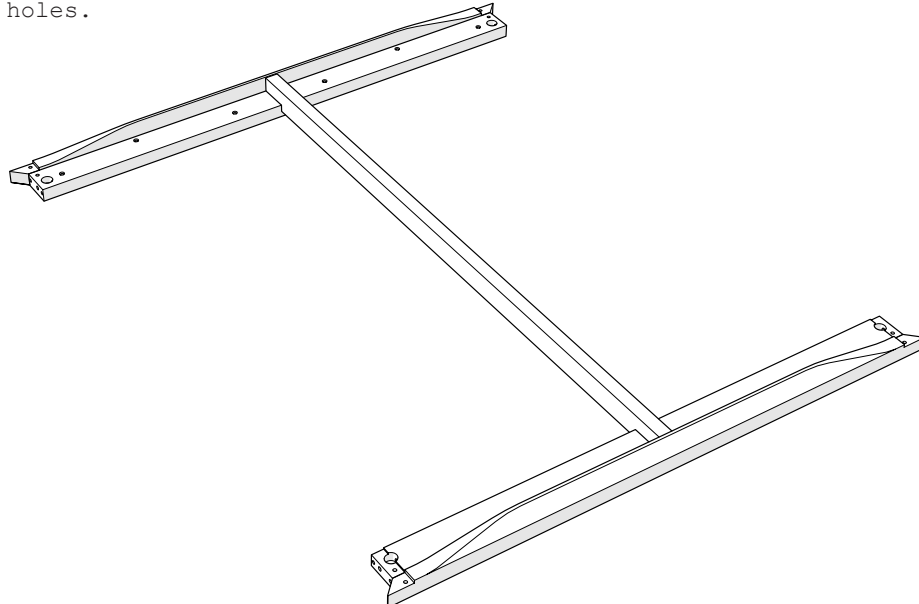


0
2
M
A
T
T
H
E
W
H
I
L
E
O
N


ASSEMBLY INSTRUCTIONS CONTINUED
BRETTON BED

2. ATTACH SIDEBEAMS

a) Lay the sidebeams face down on the floor, so they are in the correct orientation. Check for number markings.

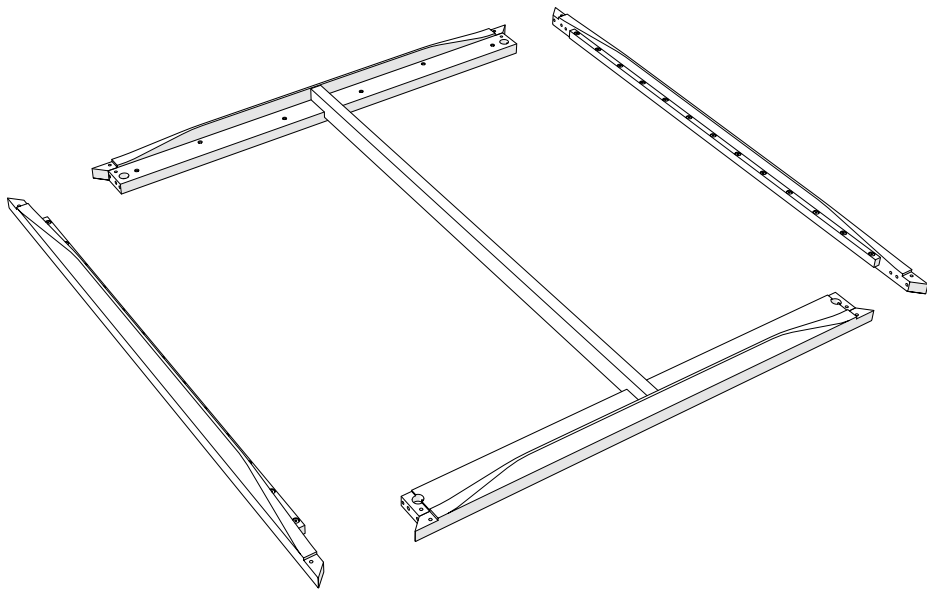

b) At each corner, place a Universal Connector in the rebate in the headbeam and footbeam, and insert a metal dowel into each end of each sidebeam. Guide the metal dowels into the Universal Connectors and tighten firmly with an Allen Key.

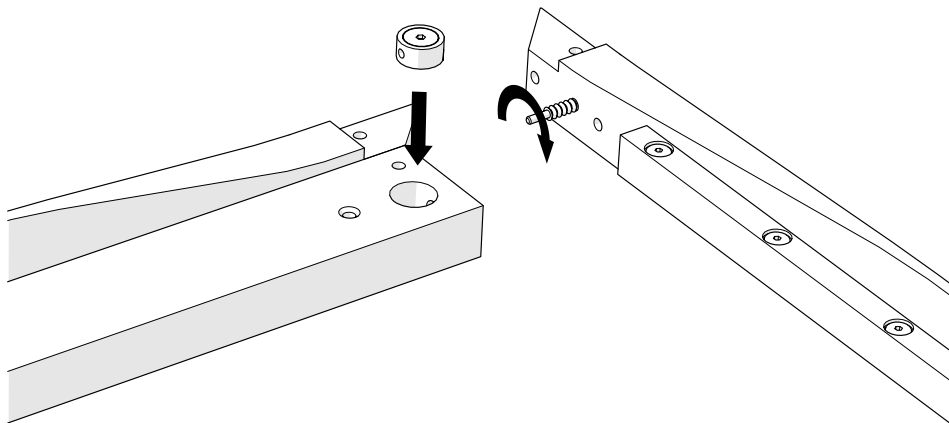


0
3
M
A
T
T
H
E
W
H
I
L
E
O
N


ASSEMBLY INSTRUCTIONS CONTINUED
BRETTON BED

3. ATTACH METAL FEET

a) Place a metal foot into the recess in each corner and secure with three M6x20 bolts, tightened with an Allen Key.

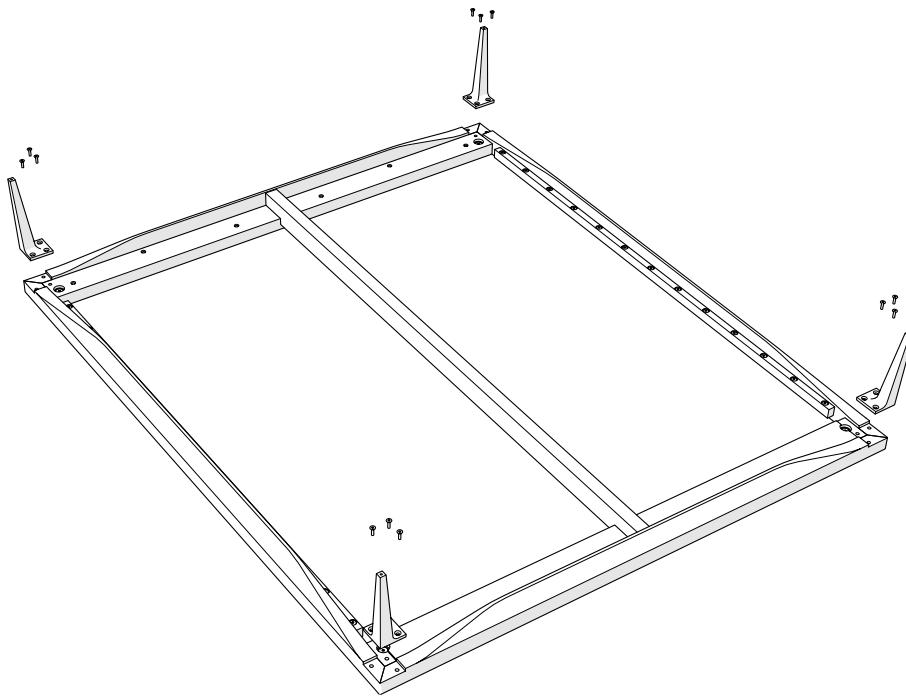

b) The frame should now look like this.

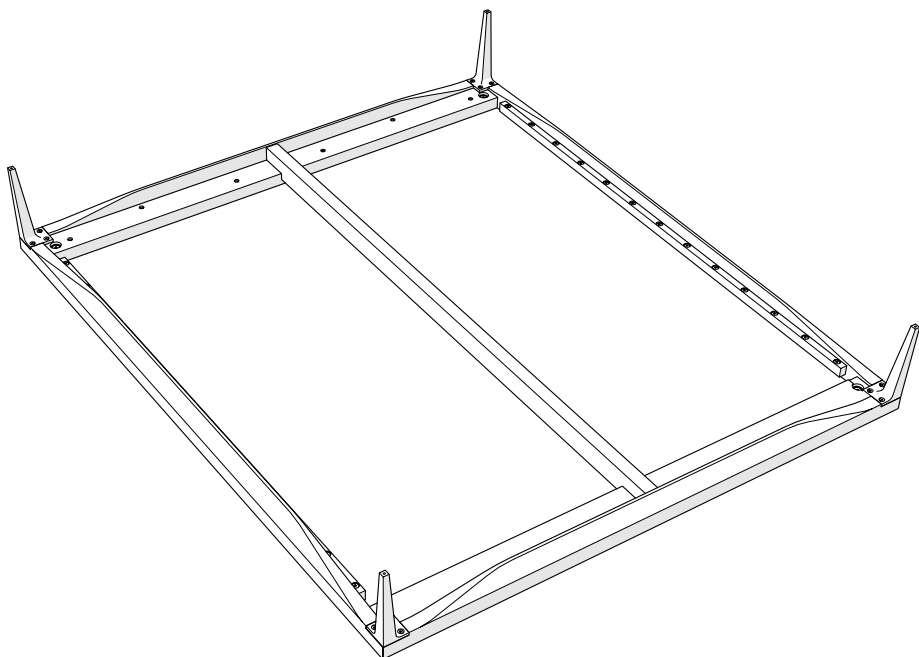


0
4
M
A
T
T
H
E
W
H
I
L
I
O
N

ASSEMBLY INSTRUCTIONS CONTINUED


BRETTON BED

c) With the help of a friend, carefully turn over the frame so it is in its natural upright position.

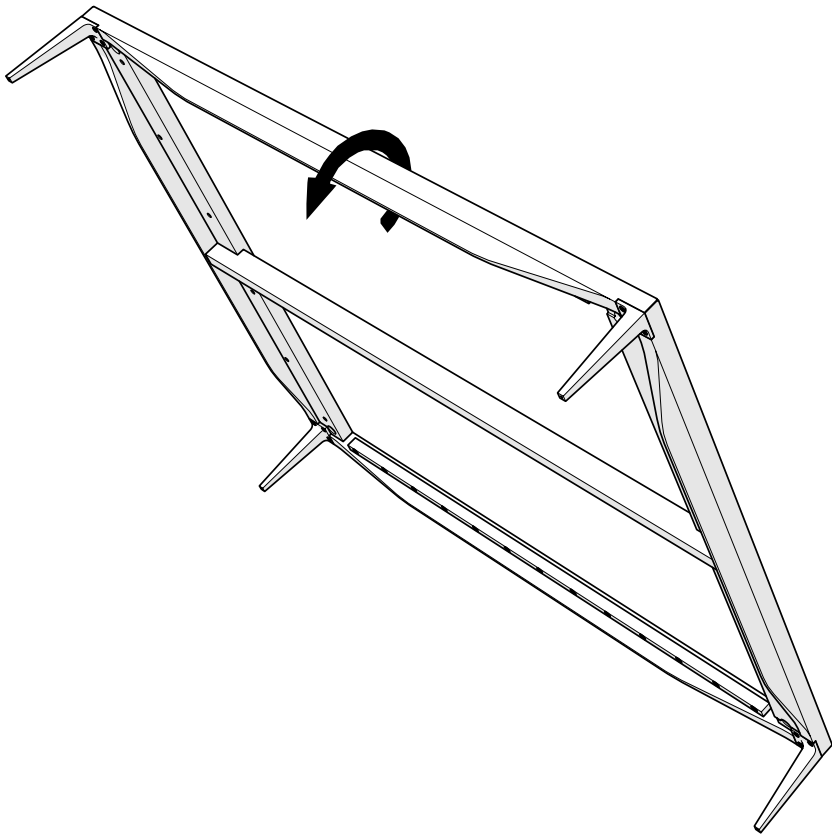

4. SECURE CENTRAL BEAM

a) Secure the central beam by inserting 2x M6x45 bolts through the headbeam and footbeam and into the central beam. Tighten with an Allen Key.

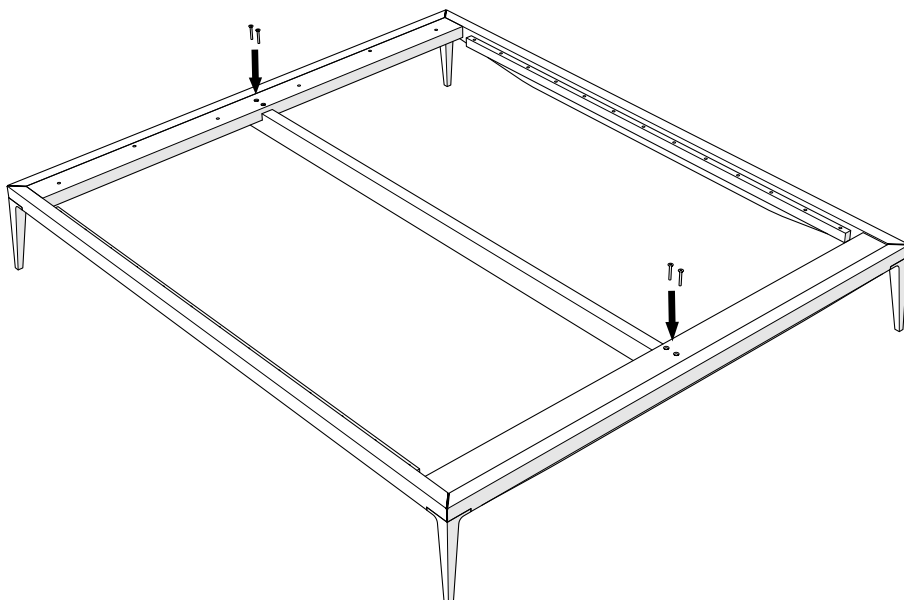

0
5
M
A
T
T
H
E
W
H
I
L
T
O
N


ASSEMBLY INSTRUCTIONS CONTINUED

BRETTON BED

5. ATTACH THE TIMBER SLATS TO THE PLATFORM BASE

a) Space out the bed slats so they are aligned with the corresponding holes on the timber lip on the inner face of the side beams. The underside of the each slat has a threaded sleeve fixed inside. If the sleeve drops out, there are spares you can use. The top of each slat has a recess for the washer.

b) Place a washer in the recess of each slat and insert an M5 bolt through the slat and into the sidebeam. Using a cordless drill or socket set, tighten the bolts. Tighten the slats well, so they are not wobbly, but be very careful not to overtighten.

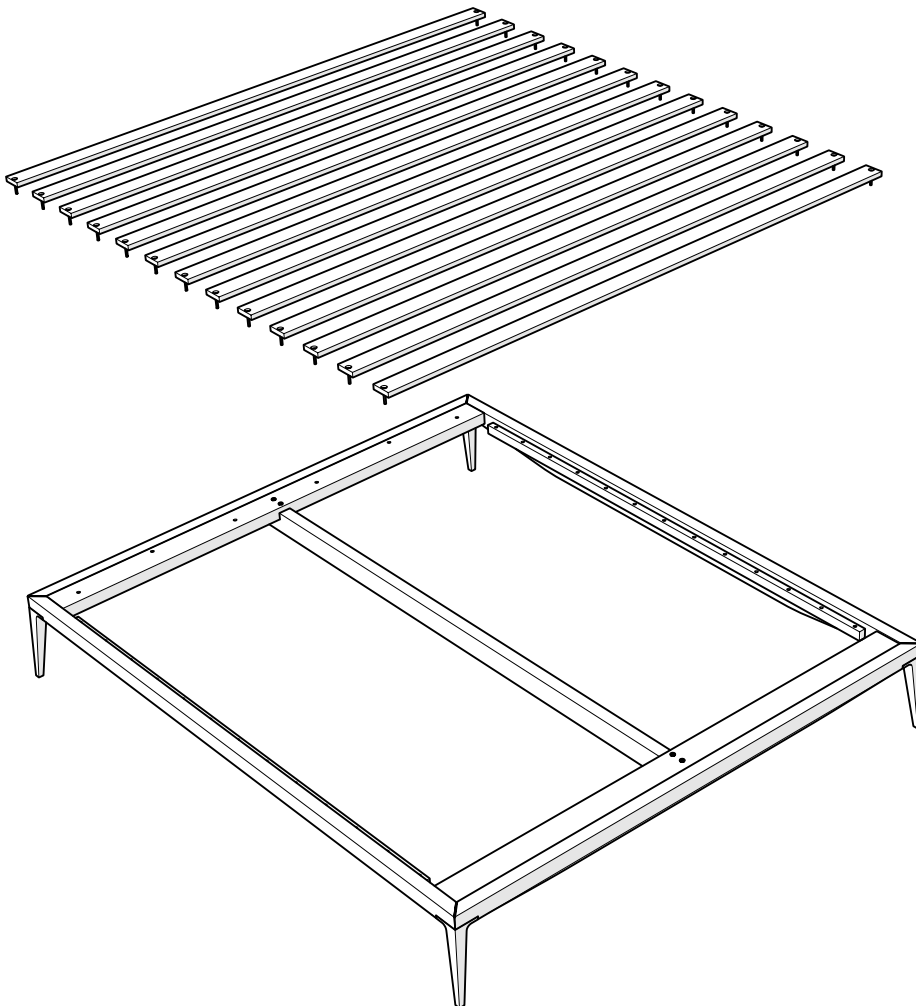

0

6

M

A

T

T

H

E

W

H

I

L


H

O

N

ASSEMBLY INSTRUCTIONS CONTINUED
BRETTON BED


c) The platform base should now look like this.

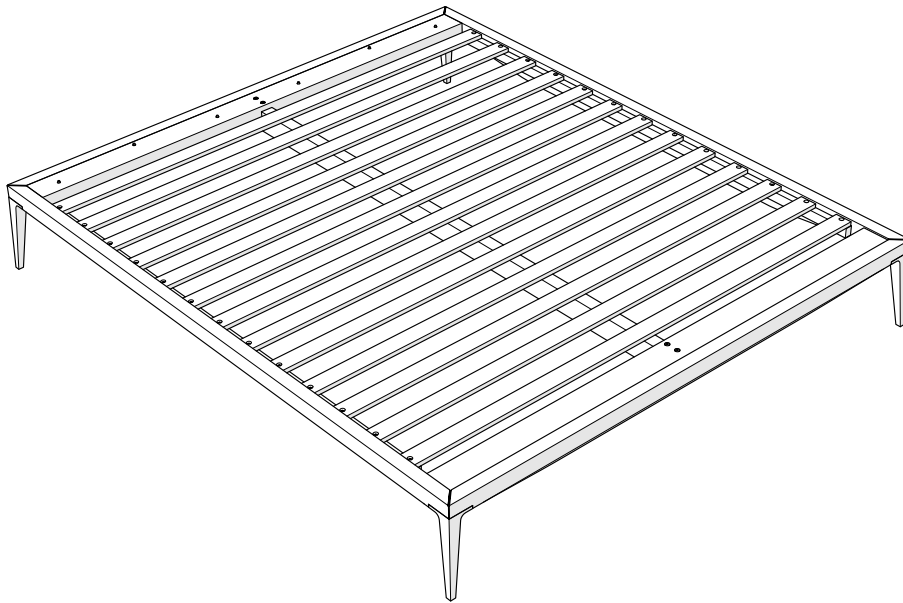

6. ATTACH THE HEADBOARD

a) Place the headboard onto the platform base at the headbeam end, being sure to align the pre-drilled holes.

b) From below, insert 6x M6x45 bolts through the platform base and into the headboard, tightening with an Allen Key.

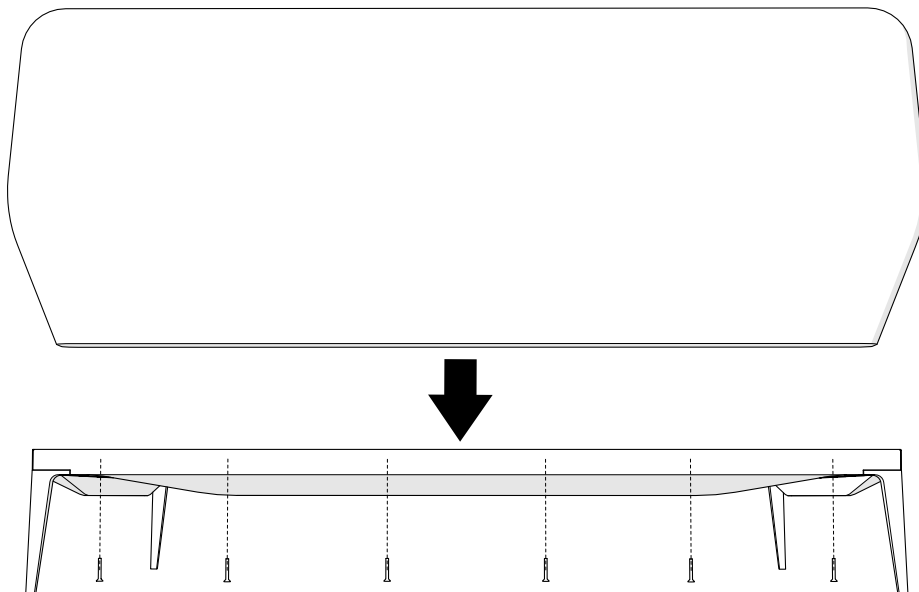


0
7
M
A
T
T
H
E
W
H
I
L
I
O
N

ASSEMBLY INSTRUCTIONS CONTINUED

BRETTON BED

c) Assembly is now complete and the bed is ready to receive a mattress.

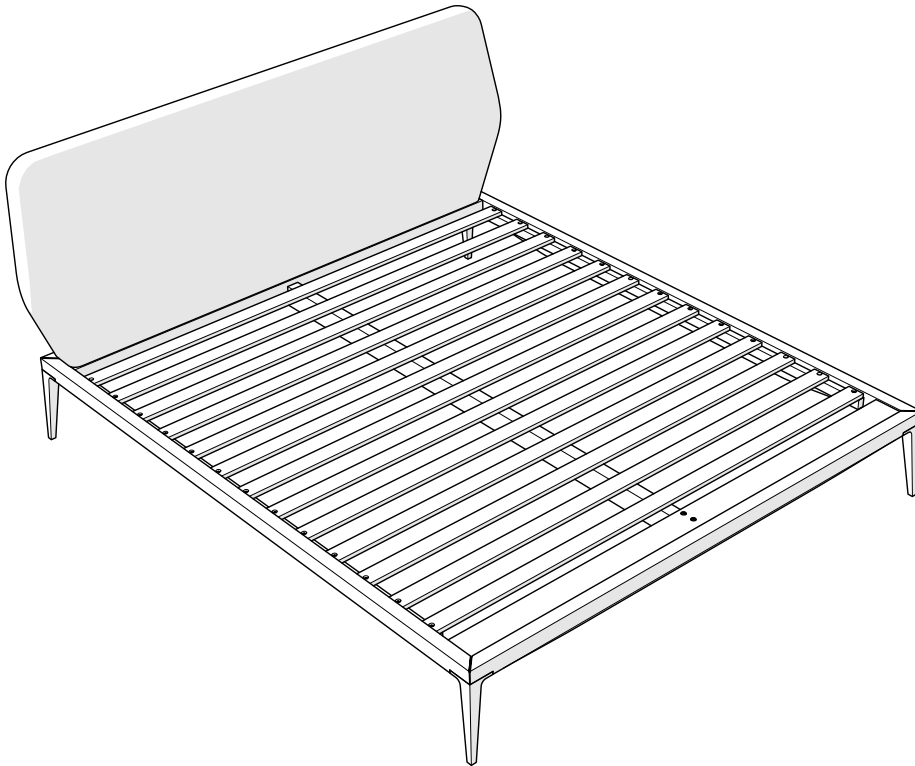

0
8
M
A
T
T
H
E
W
H
I
L
E
O
N